

Instruction Manual

APCI-8001, APCI-8008 and CPCI-8004

Look-ahead mode



Product information

This manual contains the technical installation and important instructions for correct commissioning and usage, as well as production information according to the current status before printing.

The content of this manual and the technical product data may be changed without prior notice.

ADDI-DATA GmbH reserves the right to make changes to the technical data and the materials included herein.

Warranty and liability

The user is not permitted to make changes to the product beyond the intended use, or to interfere with the product in any other way.

ADDI-DATA shall not be liable for obvious printing and phrasing errors. In addition, ADDI DATA, if legally permissible, shall not be liable for personal injury or damage to materials caused by improper installation and/or commissioning of the product by the user or improper use, for example, if the product is operated despite faulty safety and protection devices, or if notes in the operating instructions regarding transport, storage, installation, commissioning, operation, thresholds, etc. are not taken into consideration. Liability is further excluded if the operator changes the product or the source code files without authorisation and/or if the operator is guilty of not monitoring the permanent operational capability of working parts and this has led to damage.

Copyright

This manual, which is intended for the operator and its staff only, is protected by copyright.

Duplication of the information contained in the operating instructions and of any other product information, or disclosure of this information for use by third parties, is not permitted, unless this right has been granted by the product licence issued. Non-compliance with this could lead to civil and criminal proceedings.

ADDI-DATA software product licence

Please read this licence carefully before using the standard software. The customer is only granted the right to use this software if he/she agrees with the conditions of this licence.

The software must only be used to set up the ADDI-DATA products.

Reproduction of the software is forbidden (except for back-up and for exchange of faulty data carriers). Disassembly, decompilation, decryption and reverse engineering of the software are forbidden. This licence and the software may be transferred to a third party if this party has acquired a product by purchase, has agreed to all the conditions in this licence contract and the original owner does not keep any copies of the software.

Trademarks

- ADDI-DATA, APCI-1500, MSX-Box and MSX-E are registered trademarks of ADDI-DATA GmbH.
- Turbo Pascal, Delphi, Borland C, Borland C++ are registered trademarks of Borland Software Corporation.
- Microsoft .NET, Microsoft C, Visual C++, MS-DOS, Windows 95, Windows 98, Windows 2000, Windows NT, Windows EmbeddedNT, Windows XP, Windows Vista, Windows 7, Windows Server 2000, Windows Server 2003, Windows Embedded and Internet Explorer are registered trademarks of Microsoft Corporation.
- LabVIEW, LabWindows/CVI, DASyLab, DIAdem are registered trademarks of National Instruments Corporation.
- CompactPCI is a registered trademark of PCI Industrial Computer Manufacturers Group.
- VxWorks is a registered trademark of Wind River Systems, Inc.
- RTX is a registered trademark of IntervalZero.

Warning

The following risks result from improper implementation and from use of the board contrary to the regulations:



Personal injury



Damage to the board, the PC and peripherals



Pollution of the environment

- Protect yourself, others and the environment!

- Read the safety precautions (yellow leaflet) carefully!

If this leaflet is not enclosed with the documentation, please contact us and ask for it.

- Observe the instructions of the manual!

Make sure that you do not forget or skip any step. We are not liable for damages resulting from a wrong use of the board.

- Pay attention to the following symbols:



IMPORTANT!


Designates hints and other useful information.



WARNING!

Designates a possibly dangerous situation.

If the instructions are ignored, the board, the PC and/or peripherals may be **destroyed**.

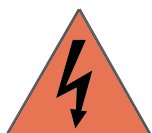

WARNING!

Designates a possibly dangerous situation.

If the instructions are ignored, the board, the PC and/or peripherals may be **destroyed** and persons may be **endangered**.

Contents

Warning	3
Chapter overview	5
1 Mode description	6
1.1 Using the Look-ahead mode	6
1.2 Activating the Look-ahead mode	6
2 Velocity jumps	7
2.1 Definition example	7
2.2 Limitation of velocity jumps	7
3 Contact and support	18

Figures

Fig. 2-1: Test contour	7
Fig. 2-2: Graphic system analysis: z-axis (profile 1)	9
Fig. 2-3: Graphic system analysis: z-axis (profile 2)	11
Fig. 2-4: Graphic system analysis: z-axis (profile 3)	13
Fig. 2-5: Trajectory velocity course without velocity jump limitation	14
Fig. 2-6: x-axis velocity course without velocity jump limitation	15
Fig. 2-7: y-axis velocity course without velocity jump limitation	15
Fig. 2-8: Trajectory velocity course with velocity jump limitation	16
Fig. 2-9: x-axis velocity course with velocity jump limitation	16
Fig. 2-10: y-axis velocity course with velocity jump limitation	17

Tables

Table 2-1: Profile data (profile 1)	7
Table 2-2: Profile data (profile 2)	9
Table 2-3: Profile data (profile 3)	11
Table 2-4: Circular and trajectory data	13

Chapter overview

In this manual, you will find the following information:

Chapter	Content
1	Information on using and activating the Look-ahead mode
2	Definition and limitation of velocity jumps
3	Contact and support address

1 Mode description

1.1 Using the Look-ahead mode

In motion control units, traversing commands are executed consecutively. The command parameters include, for example, the target coordinates, the traversing velocity, the acceleration and the target velocity (velocity in the target coordinate).

The boards **APCI-8001**, **APCI-8008** and **CPCI-8004** each have a Look-ahead mode, which allows you to combine multiple commands with one another and thus to optimise both velocity and acceleration, or depending on the axes, to limit drives. Consequently, automated velocity changes between traversing profiles can be adjusted.

The Look-ahead mode enables a contour, which includes several interpolation profiles, to be accelerated to the trajectory velocity and decelerated to the target position in a controlled manner. Here, the acceleration and braking ramps may be part of several traversing profiles as well.

If multiple spooled move commands, whose target velocities do not equal 0, are programmed consecutively, the target velocity of the profile entered last in the spooler is set to 0 (by the system software). Afterwards, the target velocities of the profiles entered before are temporarily set in a way so that the programmed trajectory acceleration can be used for deceleration at the end of the whole contour. This means that when a profile is programmed, the target velocities of the previous profiles are automatically adjusted (Look-ahead).

With this mode, it is possible to define a maximum permitted velocity jump (MDVEL) for each axis (see Chapter 2). In case this velocity jump is exceeded with an axis, the target velocity of the corresponding profile (and of the adjacent profiles) will be automatically limited. Hence, the maximum permitted velocity jump is adhered to, and irrespective of the traverse distance of the programmed profiles, all target velocities can be reached with the programmed acceleration.

1.2 Activating the Look-ahead mode

To use the Look-ahead mode, you first have to activate it by setting bit 0 in the system constant MODEREG.

More information on this can be found in the Programming and Reference Manual PM for the board (see PDF link), especially in Chapter 6.3.1.4 MODEREG.

Please also read Chapter 4.4.147 wrMDVel, and for SAP programming Chapter 6.3.3 Axis qualifiers as well.



IMPORTANT

Only use the documentation from version V2.53f!

2 Velocity jumps

2.1 Definition example

The system traverses with multiple axes with a constant trajectory velocity.

If a new profile with the same trajectory velocity but a different direction is added for running, the traversing velocities of the single axes abruptly change at the profile intersection, whereas the trajectory velocity remains constant. The latter is the geometric addition of the single axis velocities and thus only an absolute value with no directional information.


Using a real system, a velocity jump of this kind causes a position error and an abrupt change in the traversing movement.

2.2 Limitation of velocity jumps

The following figures show why velocity jumps occur during interpolated axis traversing and how these can be automatically limited by the Look-ahead mode.

As a test contour, a square in a two-dimensional coordinate system is run from the start point P0 via P1, P2 and P3 to P0.

Fig. 2-1: Test contour

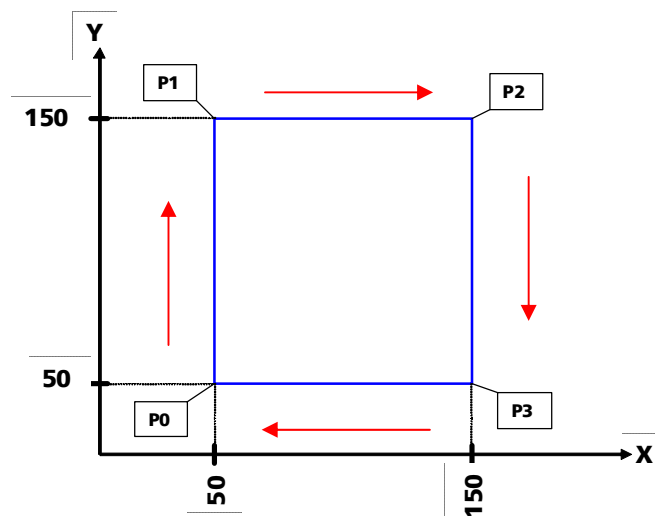


The first traversing profile consists of 4 linear SMLA interpolation commands with the following profile data:

Table 2-1: Profile data (profile 1)


Parameter	Value
Trajectory velocity	100 mm/s
Trajectory acceleration	200 mm/s ²
Trajectory target velocity	0 mm/s

This results in the following velocity and position course of the single axes:

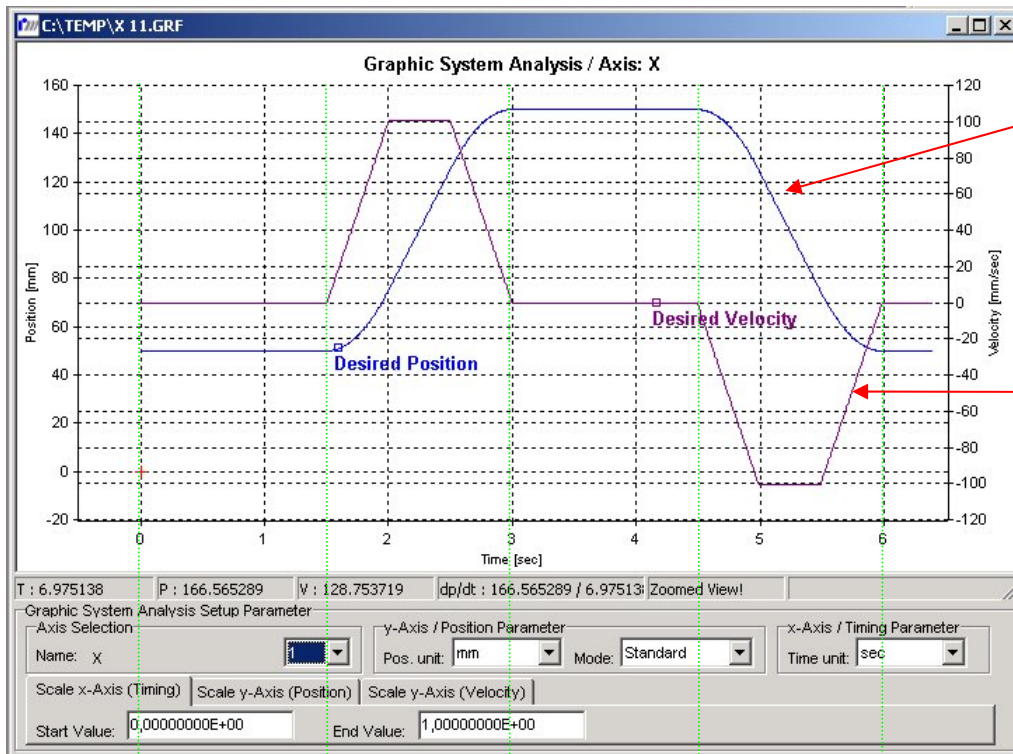


x-position in the
x-y coordinate
system

x-axis velocity

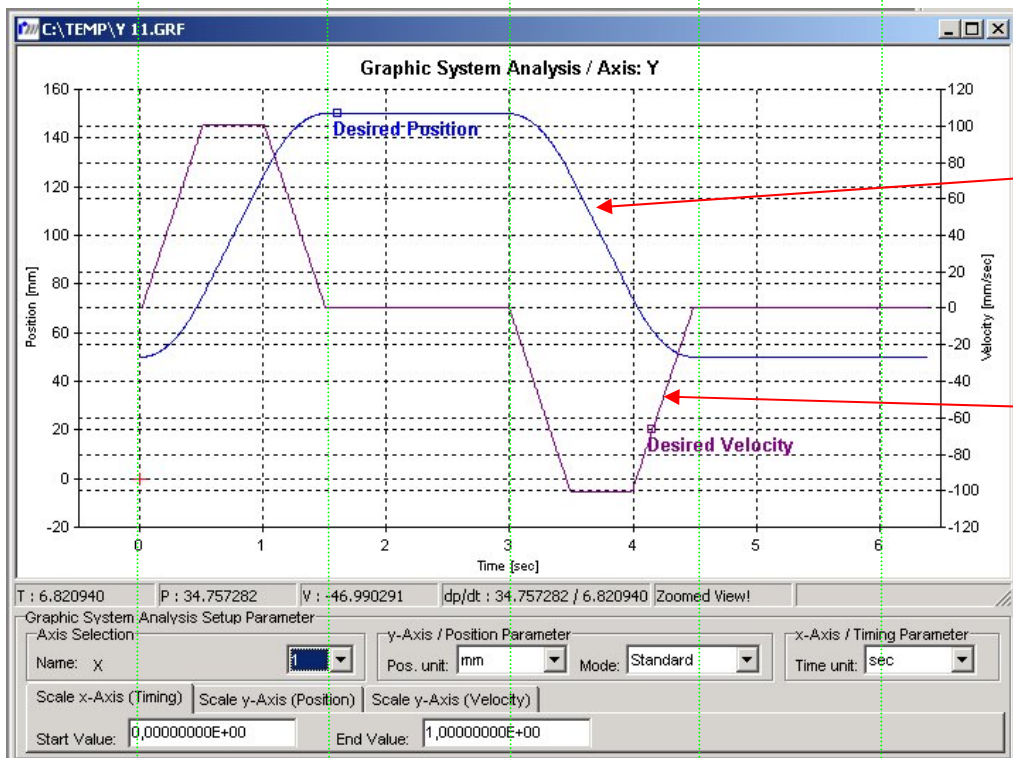


y-position in the
x-y coordinate
system

y-axis velocity



The overall traverse distance and the trajectory velocity course are represented as z-components:

Fig. 2-2: Graphic system analysis: z-axis (profile 1)

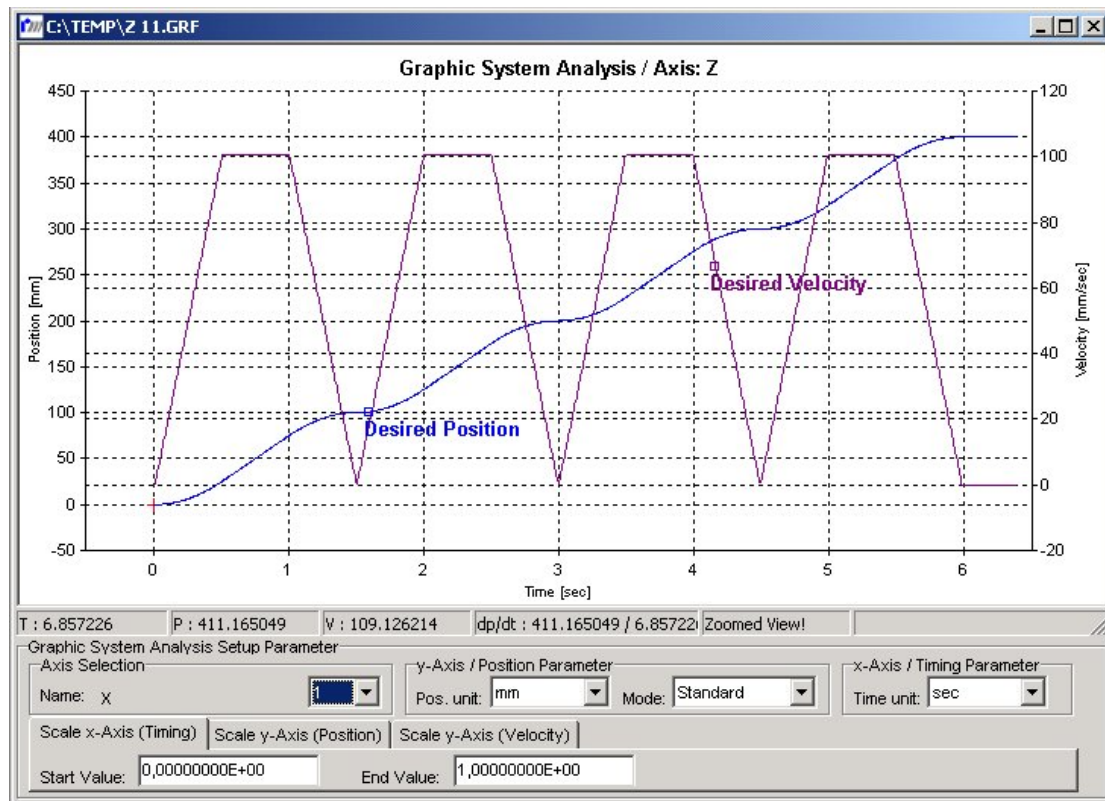

In each profile section, the axis to be traversed is accelerated with the programmed trajectory velocity to reach the traversing velocity, and after that, it is decelerated back to 0. During this process, the trajectory velocity is not constant. The entire traversing profile is run within 6 s.


The second traversing profile consists of 4 linear SMLA interpolation commands with the following profile data:

Table 2-2: Profile data (profile 2)

Parameter	Value
Trajectory velocity	100 mm/s
Trajectory acceleration	200 mm/s ²
Trajectory target velocity	100 mm/s

Here, the trajectory target velocity corresponds to the trajectory velocity. Only in the last profile section from P3 to P0, the trajectory velocity is decelerated back to 0.


This results in the following velocity and position course of the single axes:

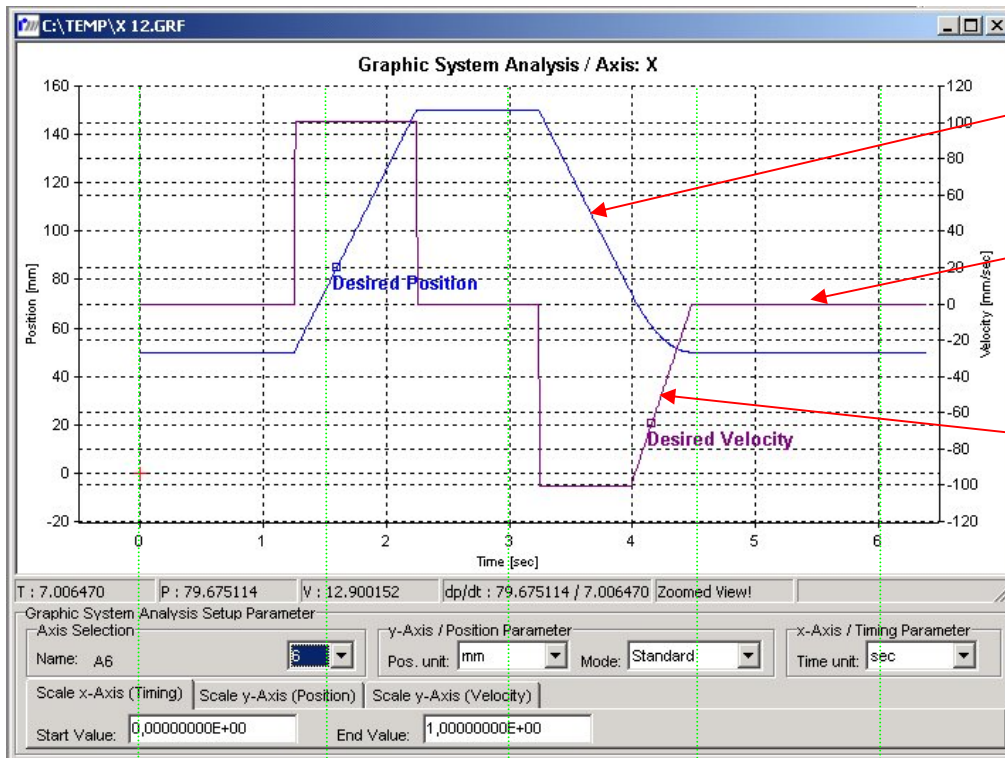

x-position in the
x-y coordinate
system

x-axis velocity


Deceleration to 0
(from P3 to P0)

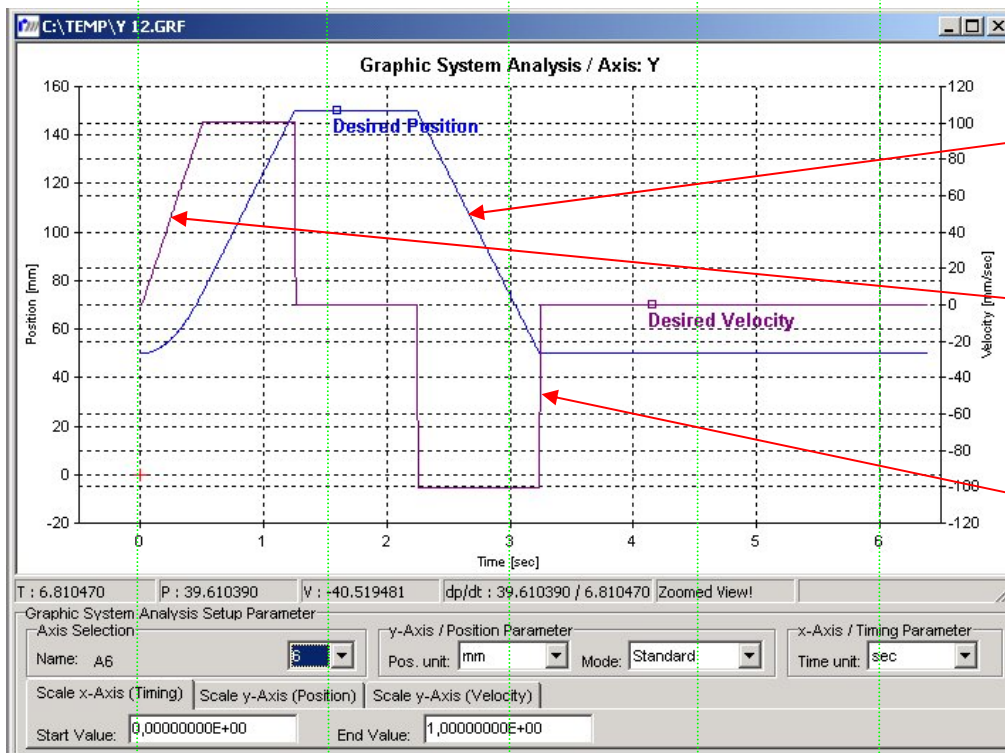

y-position in the
x-y coordinate
system


Acceleration to
trajectory target
velocity
(from P0 to P1)

y-axis velocity



The overall traverse distance and the trajectory velocity course are represented as z-components:

Fig. 2-3: Graphic system analysis: z-axis (profile 2)

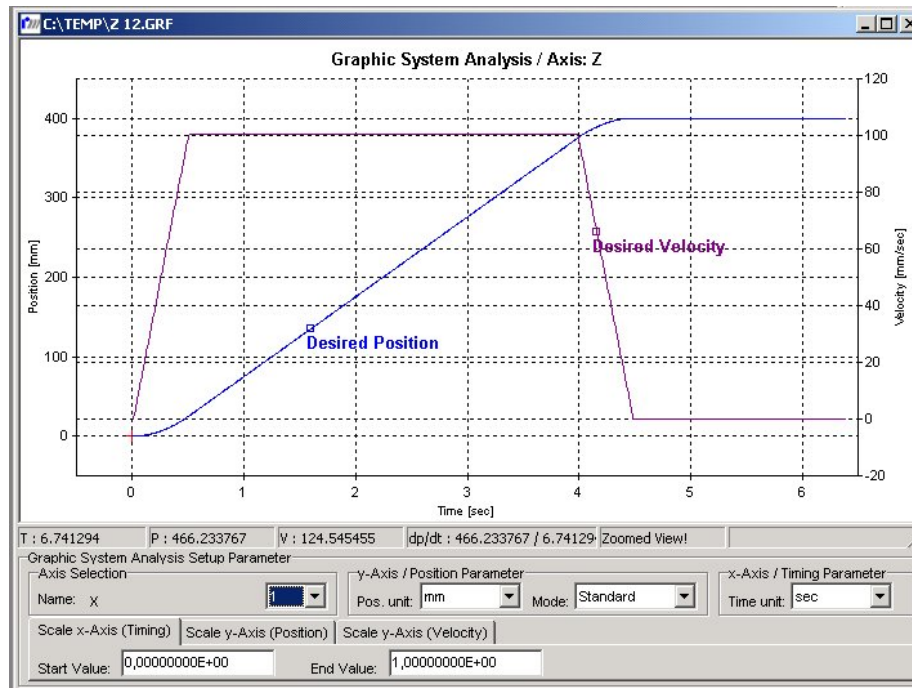

In the first profile section, the system is accelerated with the programmed trajectory acceleration to reach the trajectory velocity, and only in the last profile, it is decelerated back to 0. Between these two sections, the trajectory velocity is constant. The entire traversing profile is run within 4.5 s, because there is no intermediate stop at the profile intersections.

However, the velocities of the single axes abruptly changes at the profile intersections. As a consequence, small or big position errors occur, since real drive systems cannot implement such important velocity jumps.

The Look-ahead mode is capable of monitoring and limiting these velocity jumps. For this, the trajectory velocity at the profile intersections is limited in a way so that the predefined velocity jump is adhered to.


In the following two diagrams, the Look-ahead mode is represented with these profile data:

Table 2-3: Profile data (profile 3)

Parameter	Value
Trajectory velocity	100 mm/s
Trajectory acceleration	200 mm/s ²
Trajectory target velocity	100 mm/s
Maximum permitted velocity jump with the x- and y-axis	20 mm/s

Here, the trajectory target velocity corresponds to the trajectory velocity. Only in the last profile section from P3 to P0, the trajectory velocity is decelerated back to 0.


This results in the following velocity and position course of the single axes:

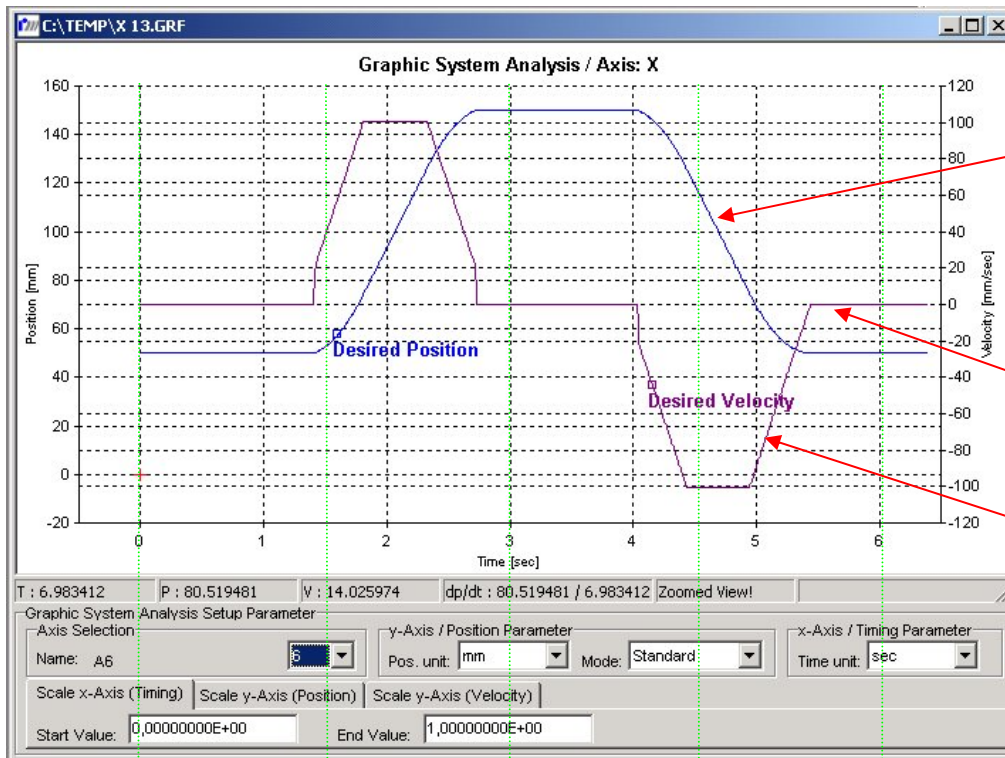

x-position in the
x-y coordinate
system

x-axis velocity


Deceleration to 0
(from P3 to P0)

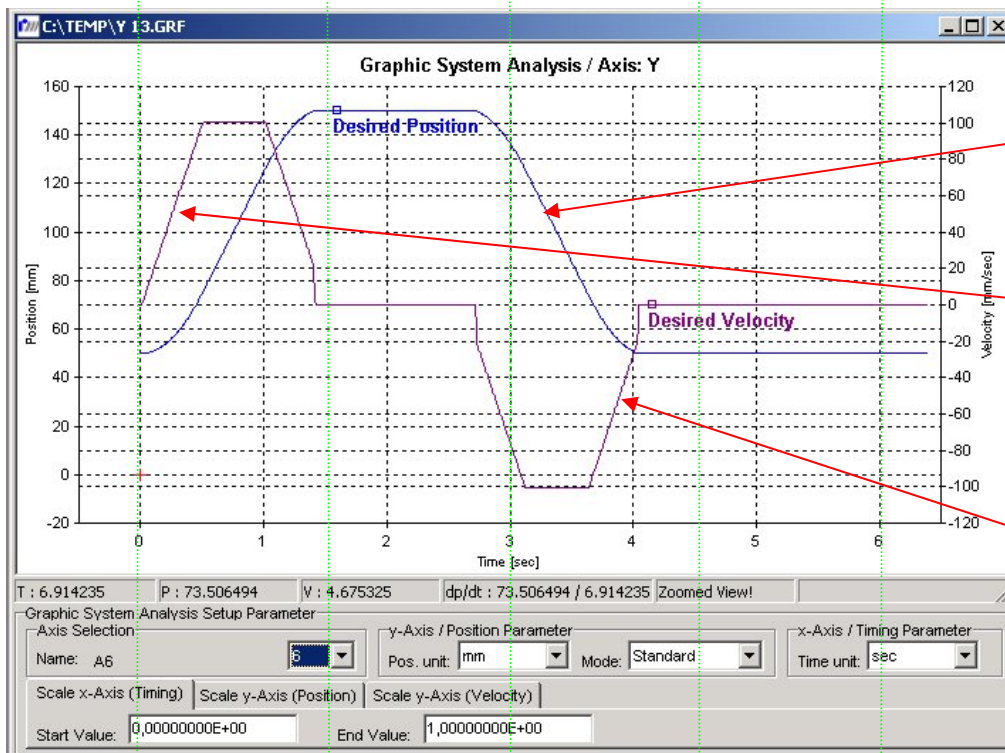

y-position in the
x-y coordinate
system


Acceleration to
trajectory target
velocity
(from P0 to P1)

y-axis velocity



The overall traverse distance and the trajectory velocity course are represented as z-components:

Fig. 2-4: Graphic system analysis: z-axis (profile 3)

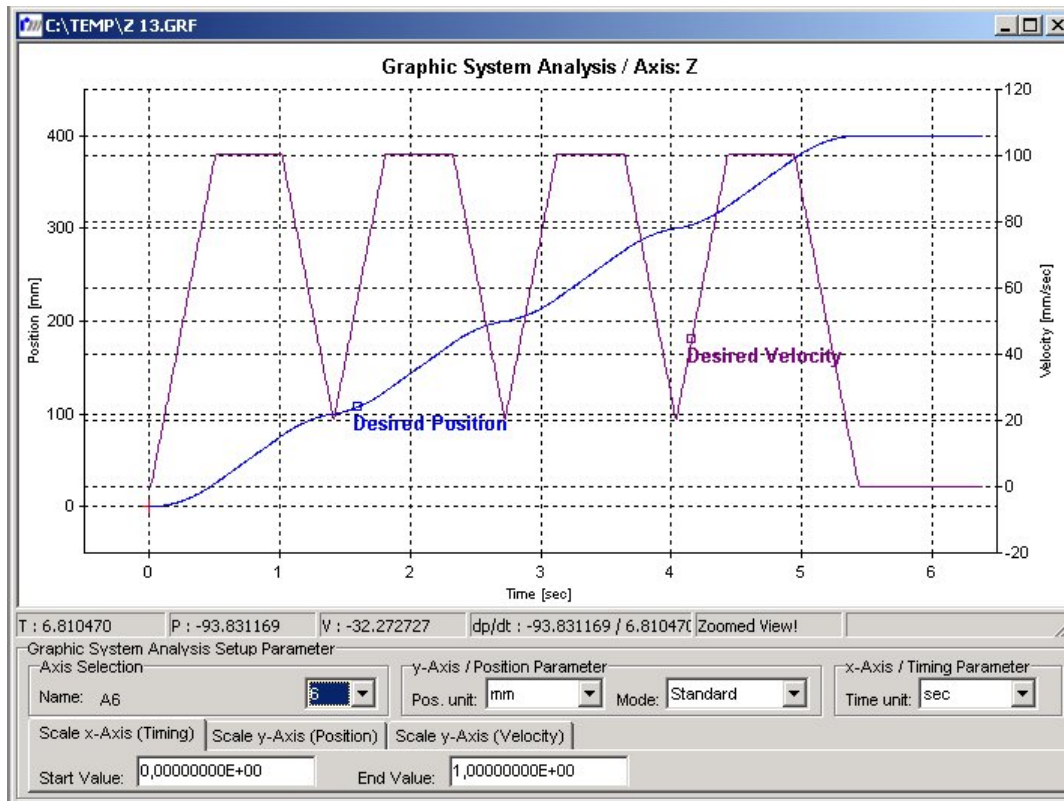

In the first profile section, the system is accelerated with the programmed trajectory acceleration to reach the trajectory velocity, and only in the last profile, it is decelerated back to 0. Between these two sections, the trajectory velocity is consistently reduced so that the velocity jumps of the single axes do not exceed 20 mm/s. The entire traversing profile is run within 5.5 s. If the Look-ahead mode is used, the abrupt changes at the profile intersections are much smaller, which increases path accuracy.

This is an extreme example, though. When real contours are run, curves (such as circular arcs) generally consist of linear interpolation parts. This is represented in the following diagrams in which a circle is approximated by 36 straight interpolation lines, with the traversing direction being changed by 10 degrees with each vector.

Table 2-4: Circular and trajectory data

Parameter	Value
Running a circle in the x-y level with radius	10 mm
Traverse angle	360°
Programmed trajectory velocity	20 mm/s
Programmed trajectory acceleration	10 mm/s ²
Velocity jump limited to	2 mm/s

In the preceding example, the option NoTriangle is activated. This option prevents triangular acceleration and deceleration in a traversing vector. On the one hand, this helps to get smoother traversing, but on the other hand, the trajectory velocity is reduced as well (see the following diagrams).

In the next three diagrams, the function for monitoring velocity jumps is deactivated; in the following three diagrams, the rounding of the velocity steps can be seen.

Fig. 2-5: Trajectory velocity course without velocity jump limitation

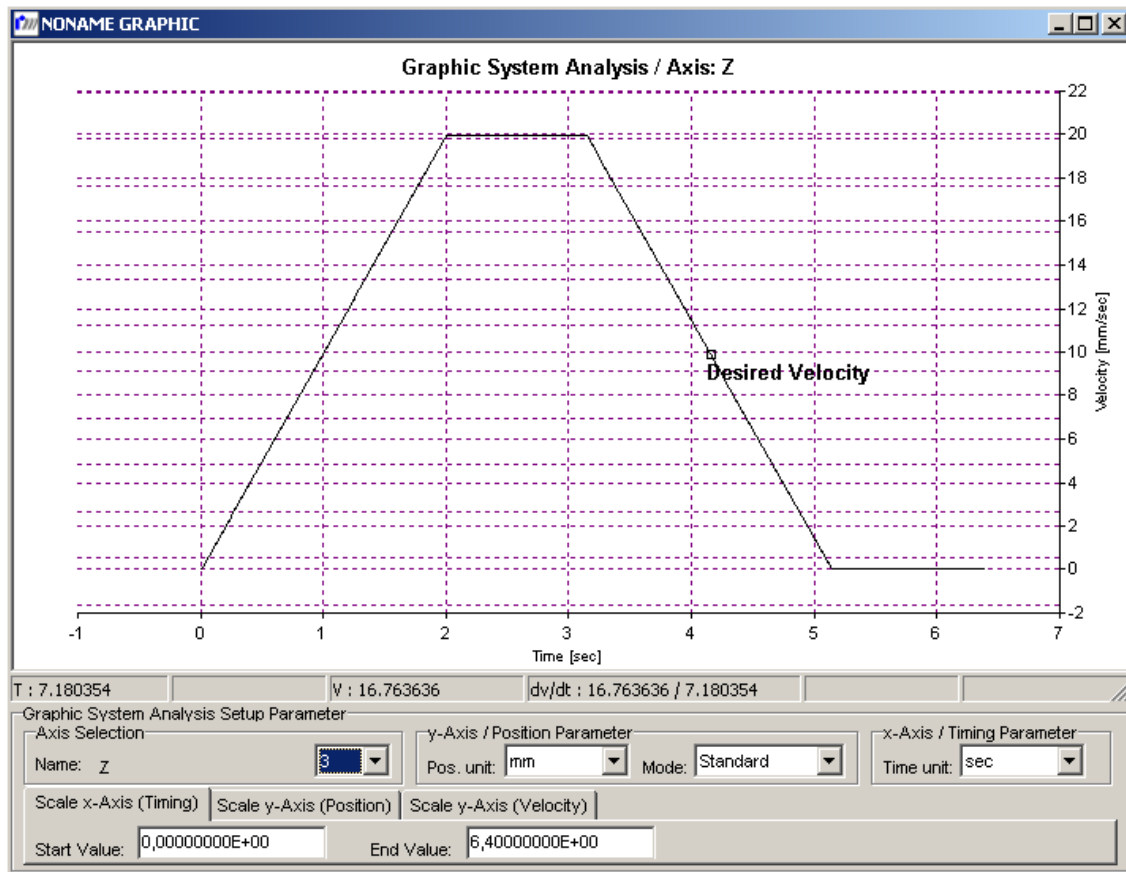


Fig. 2-6: x-axis velocity course without velocity jump limitation

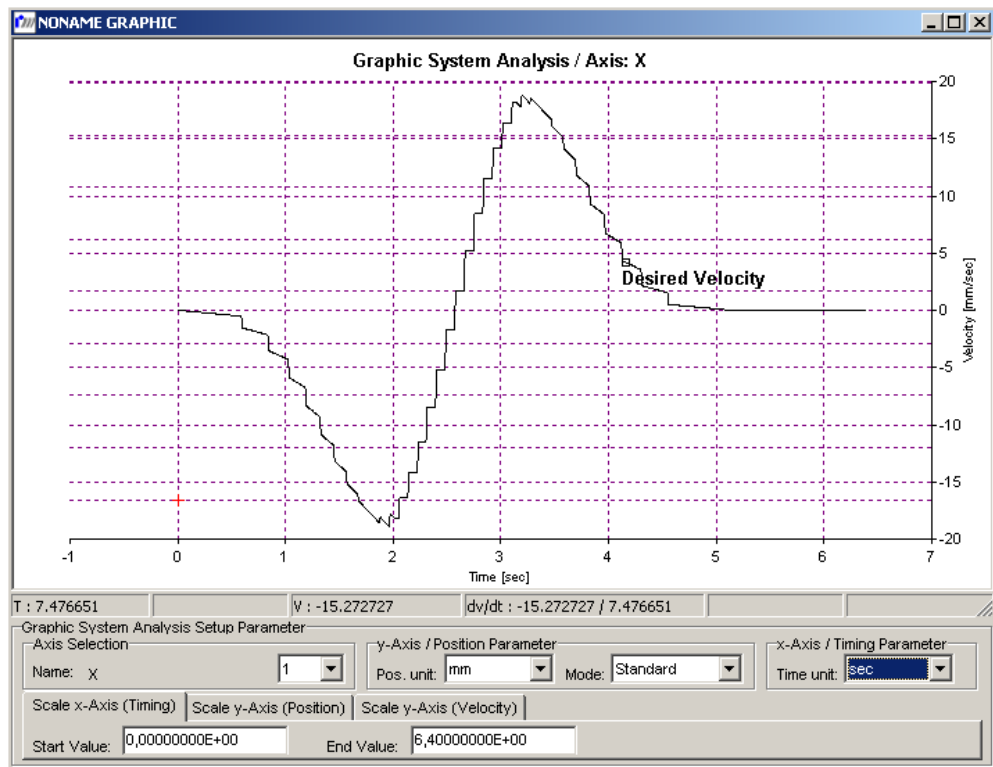


Fig. 2-7: y-axis velocity course without velocity jump limitation

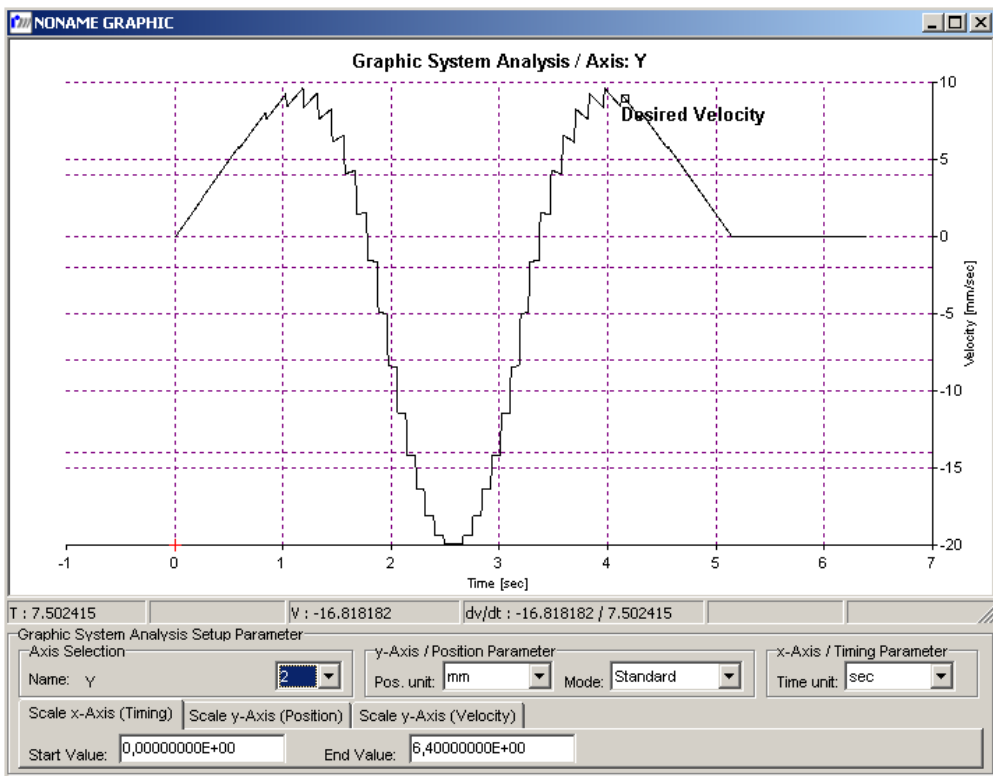


Fig. 2-8: Trajectory velocity course with velocity jump limitation

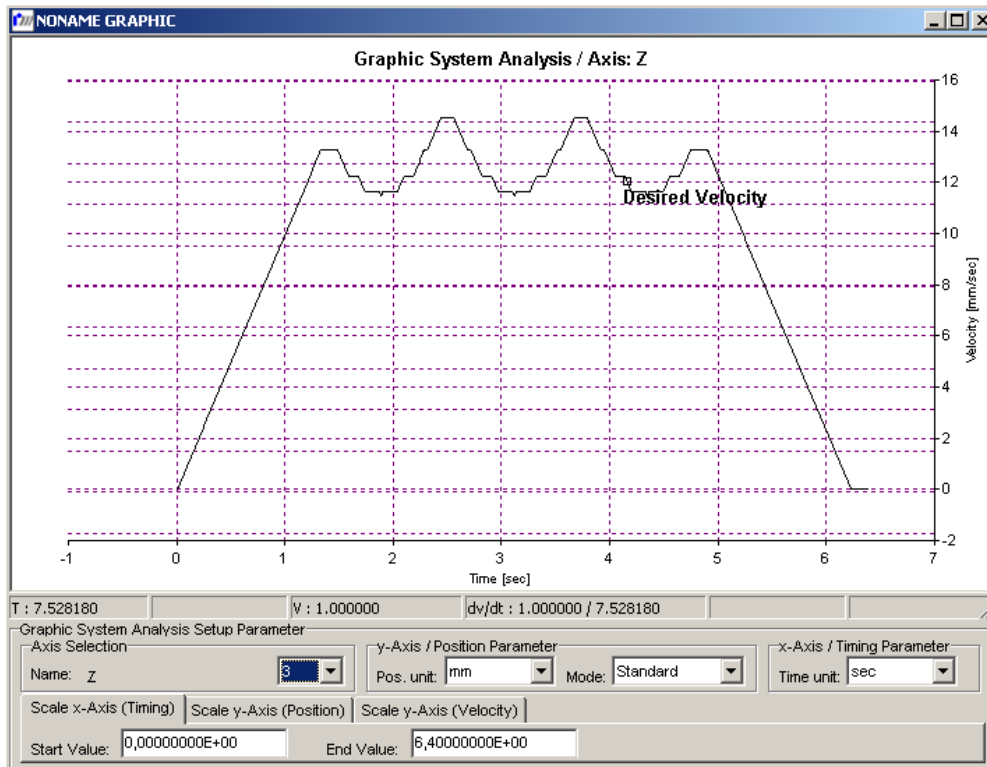


Fig. 2-9: x-axis velocity course with velocity jump limitation


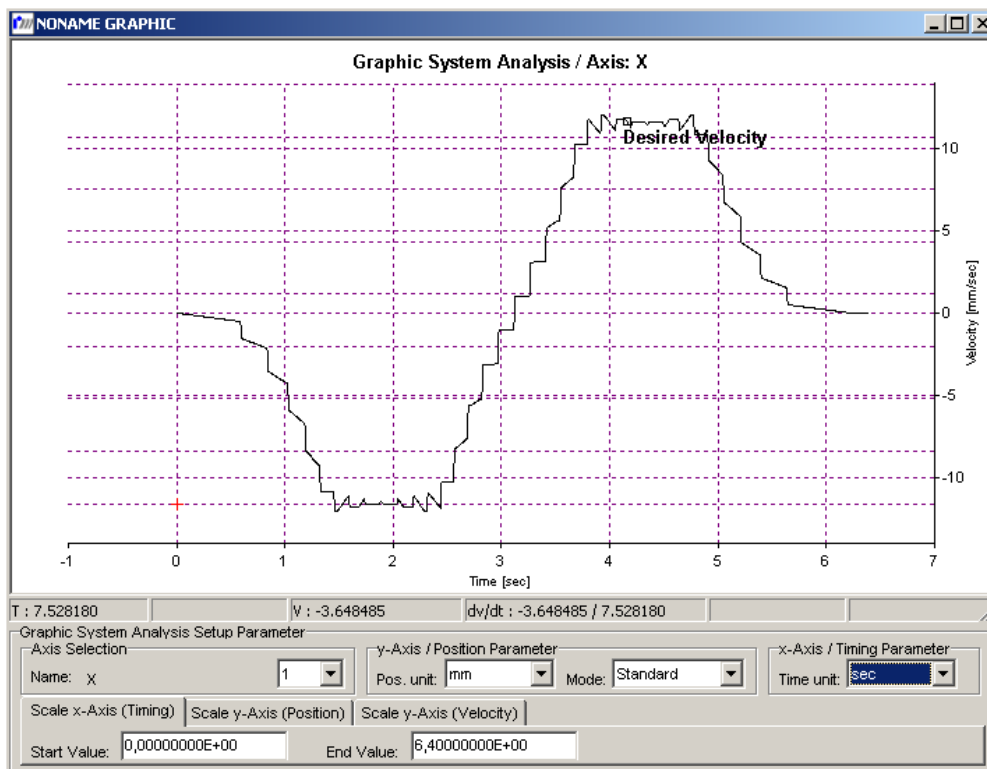


Fig. 2-10: y-axis velocity course with velocity jump limitation

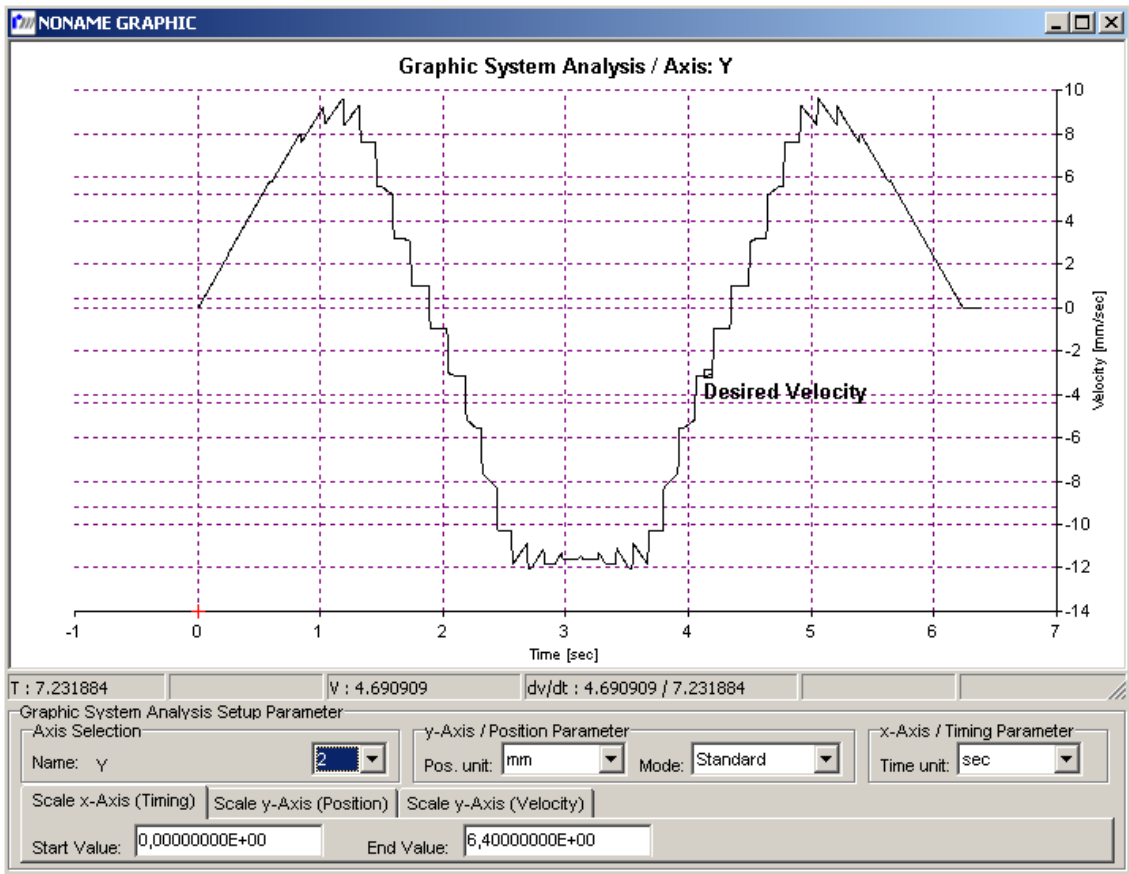

3 Contact and support

Do you have any questions? Write or phone us:

Address: ADDI-DATA GmbH
Airpark Business Center
Airport Boulevard B210
77836 Rheinmünster
Germany

Phone: +49 7229 1847-0

Fax: +49 7229 1847-222

E-mail: info@addi-data.com

Manual and software download from the Internet:

www.addi-data.com